



QUICK GUIDE

SPEED

Controls the speed of the tremolo effect.

CURVE SWITCH

Toggles between a square or a triangular waveform.

DEPTH

Controls the intensity of the tremolo effect. When set to fully CW the original signal is cut off completely.



LED

When lit the effect is engaged.

FOOTSWITCH

Toggle between on/off. When switched OFF (bypassed) the unit acts as a unity gain Line Driver, capable of driving even very long cables without tonal loss.

INPUT

A high impedance (1M Ω) mono input. Plug your instrument in here.

OUTPUT

A low impedance (50 Ω) mono output. Connect to the next pedal or your amp.



9-12VDC

Plug your power supply in here. 9-12VDC @ 50mA with center negative. Standard 5.5mm x 2.1mm barrel connection.