

QUICK GUIDE

BAS-1 BASS PREAMP/D.I.

Input Meter:

Use the meter as a guide line only. This is an analogue unit, so there's no digital clipping.


Compressor Input:

We suggest a setting around 10-12 o'clock.

Dual Paramteric Equalizer:

Adjust to preference.

Remove unwanted frequencies of your bass, or add flavour. Hint - try boosting around 7-800Hz with Q at 10 o'clock.

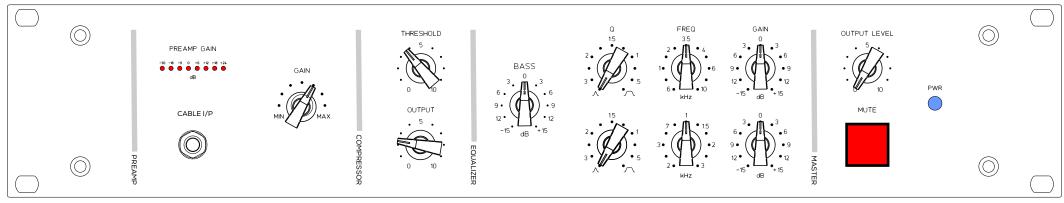

Input Gain:

Depends on the output from your bass guitar. Try 1 o'clock as a starting point. Compressor Output:

We suggest a setting below 11 o'clock.

BASS:

with a high Q (narrow band)

MUTE:

Set the switch in un-Mute position (no light) when using the footswitch.